


BASIC SYSTEM

HEATER UNIT DISASSEMBLY/ASSEMBLY

1. Disassemble in the order indicated in the table.
2. Assemble in the reverse order of disassembly.

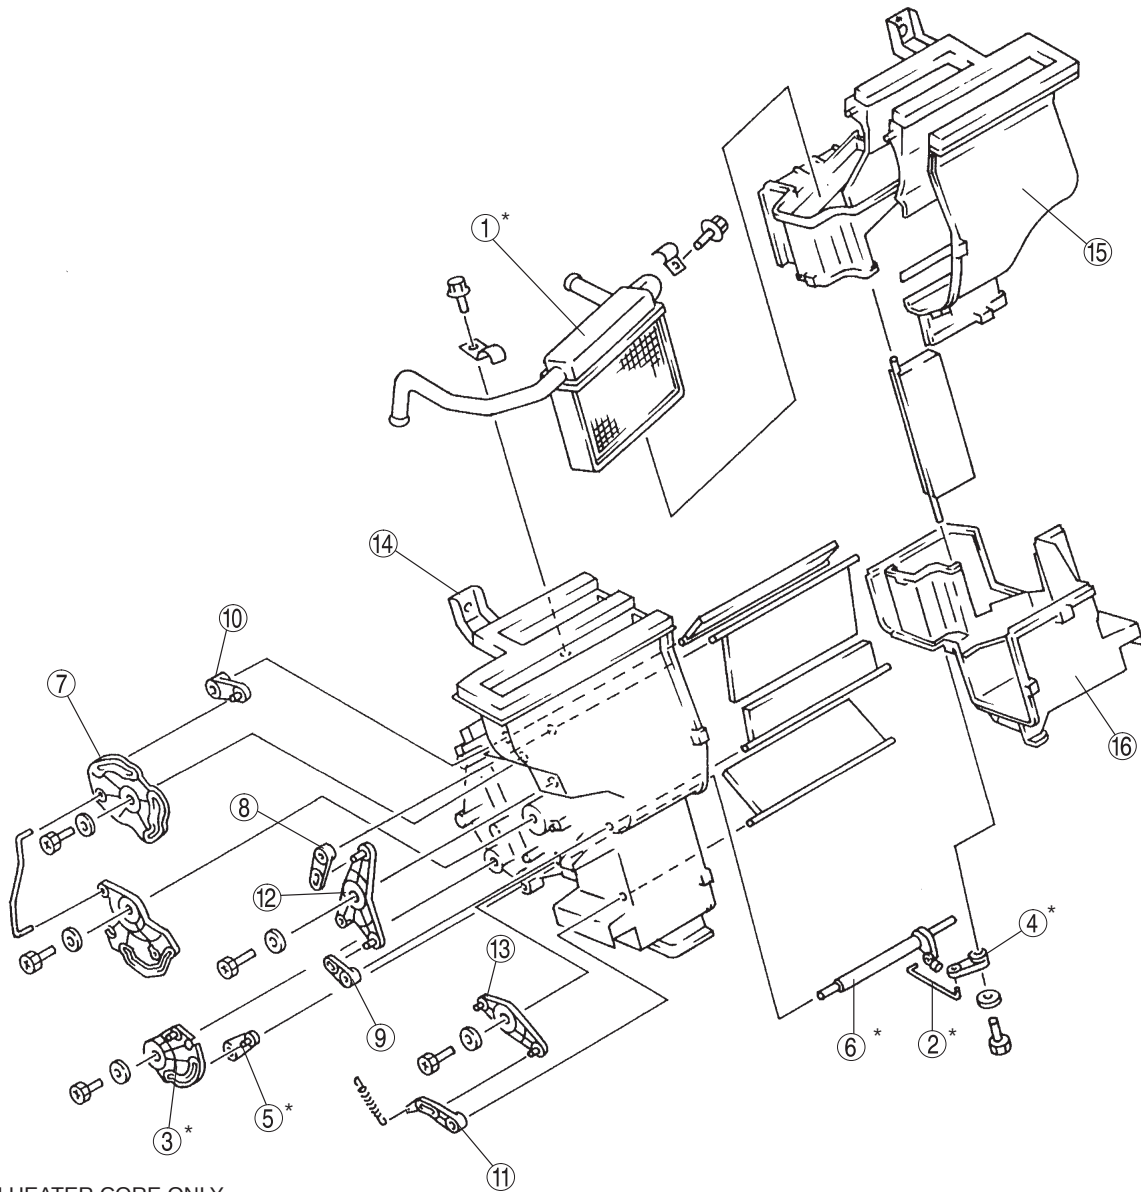

* WITH HEATER CORE ONLY

1	Heater core
2	Air mix rod
3	Air mix link
4	Air mix crank (1)
5	Air mix crank (2)
6	Air mix shaft
7	Airflow mode main link
8	Airflow mode crank (1)

9	Airflow mode crank (2)
10	Airflow mode crank (3)
11	Airflow mode crank (4)
12	Airflow mode sub link (1)
13	Airflow mode sub link (2)
14	Heater case (1)
15	Heater case (2)
16	Heater case (3)