


DASHBOARD AND CONSOLE

DASHBOARD REMOVAL/INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the driver-side air bag module. (Refer to section T, AIR BAG SYSTEM, DRIVER-SIDE AIR BAG MODULE REMOVAL/INSTALLATION.)
3. Remove the passenger-side air bag module. (Refer to section T, AIR BAG SYSTEM, PASSENGER-SIDE AIR BAG MODULE REMOVAL/INSTALLATION.)
4. Remove the steering wheel. (Refer to section N, MANUAL STEERING, STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION.)
5. Remove the installation bolts then lower the assembled steering shaft from the dashboard. (Refer to section N, MANUAL STEERING, STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION.)
6. Remove the meter hood.
7. Remove the instrument cluster.
8. Remove the front console. (Refer to FRONT CONSOLE REMOVAL/INSTALLATION.)
9. Remove the glove compartment.
10. Remove the bonnet release cable installation nut.
11. Remove the A-pillar trims. (Refer to TRIM, A-PILLAR TRIM REMOVAL/INSTALLATION.)
12. Disconnect the wires for both the blower unit and the heater unit. (Refer to section U, CONTROL SYSTEM, CLIMATE CONTROL UNIT REMOVAL.) (Refer to section U, CONTROL SYSTEM, CLIMATE CONTROL UNIT INSTALLATION.)
13. Remove the fuse block.
14. Remove in the order indicated in the table.
15. Install in the reverse order of removal.
16. Adjust the wires for both the blower unit and the heater unit. (Refer to section U, CONTROL SYSTEM, CLIMATE CONTROL UNIT ADJUSTMENT.)

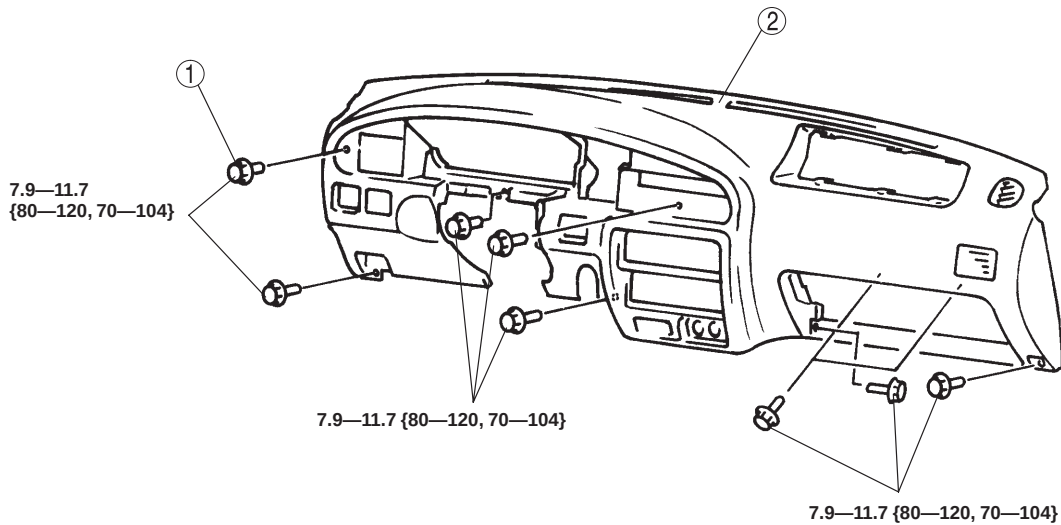

N·m {kgf·cm, in·lbf}

1	Bolt
---	------

2	Dashboard
---	-----------