

FRONT AXLE


Auto-lock Free-running Hub — 4WD —

SEC. 400

* : Lubricating parts

When installing auto-lock free-running hub,
use NISSAN GENUINE GREASE (KRC 19-00025)
or equivalent grease.

Auto-lock free-running hub assembly

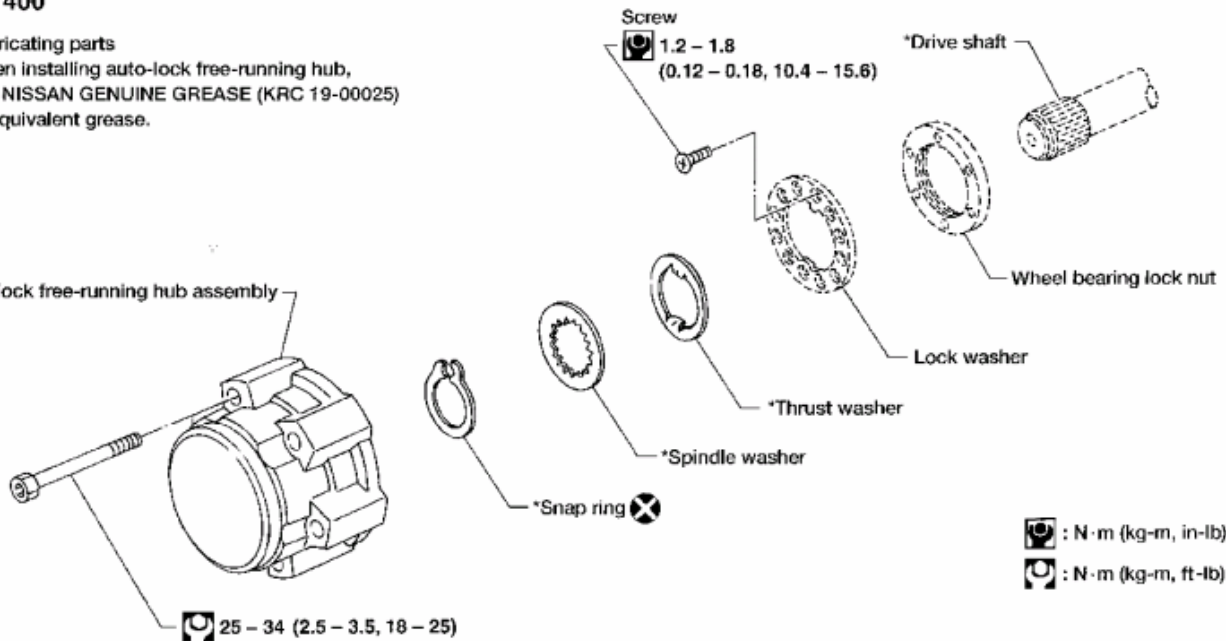

REMOVAL AND INSTALLATION

1. Set auto-lock free-running hub in the FREE position.
2. Remove auto-lock free-running hub.

3. Remove snap ring.
4. Remove spindle washer and thrust washer.
5. After installing auto-lock free-running hub, check operation.

When installing it, apply recommended grease to the parts shown in the above illustration.

