


Sectional view

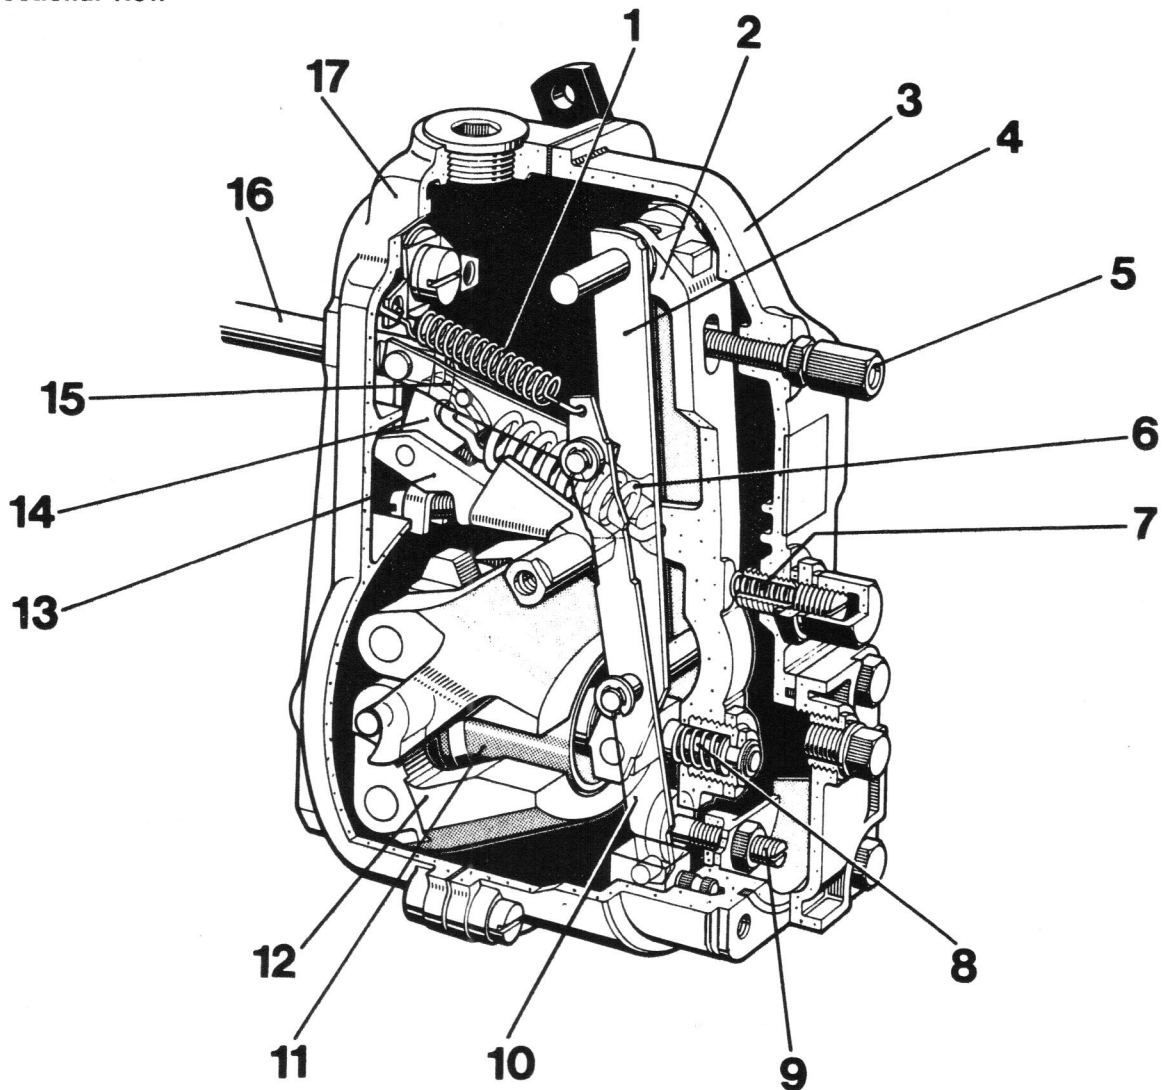

EP/RSV governor

- | | | | |
|---|--|----|---------------|
| 1 | Starting spring | 10 | Control lever |
| 2 | Tensioning lever | 11 | Guide bushing |
| 3 | Governor cover | 12 | Flyweight |
| 4 | Guide lever | 13 | Swivel lever |
| 5 | Shutoff or idle stop | 14 | Rocker |
| 6 | Control spring | 15 | Link |
| 7 | Auxiliary idle spring | 16 | Control rod |
| 8 | Compression spring for idle adjustment | 17 | Governor body |
| 9 | Full-load stop (delivery) | | |