
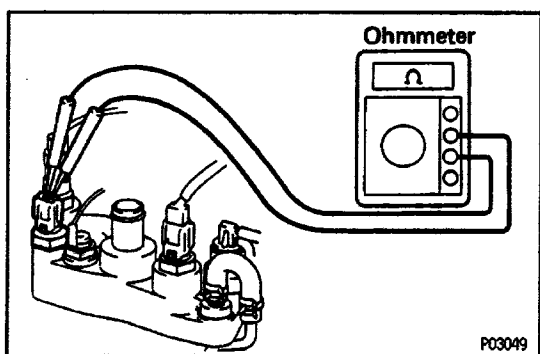


# ENGINE COOLANT TEMPERATURE (ECT) SENSOR

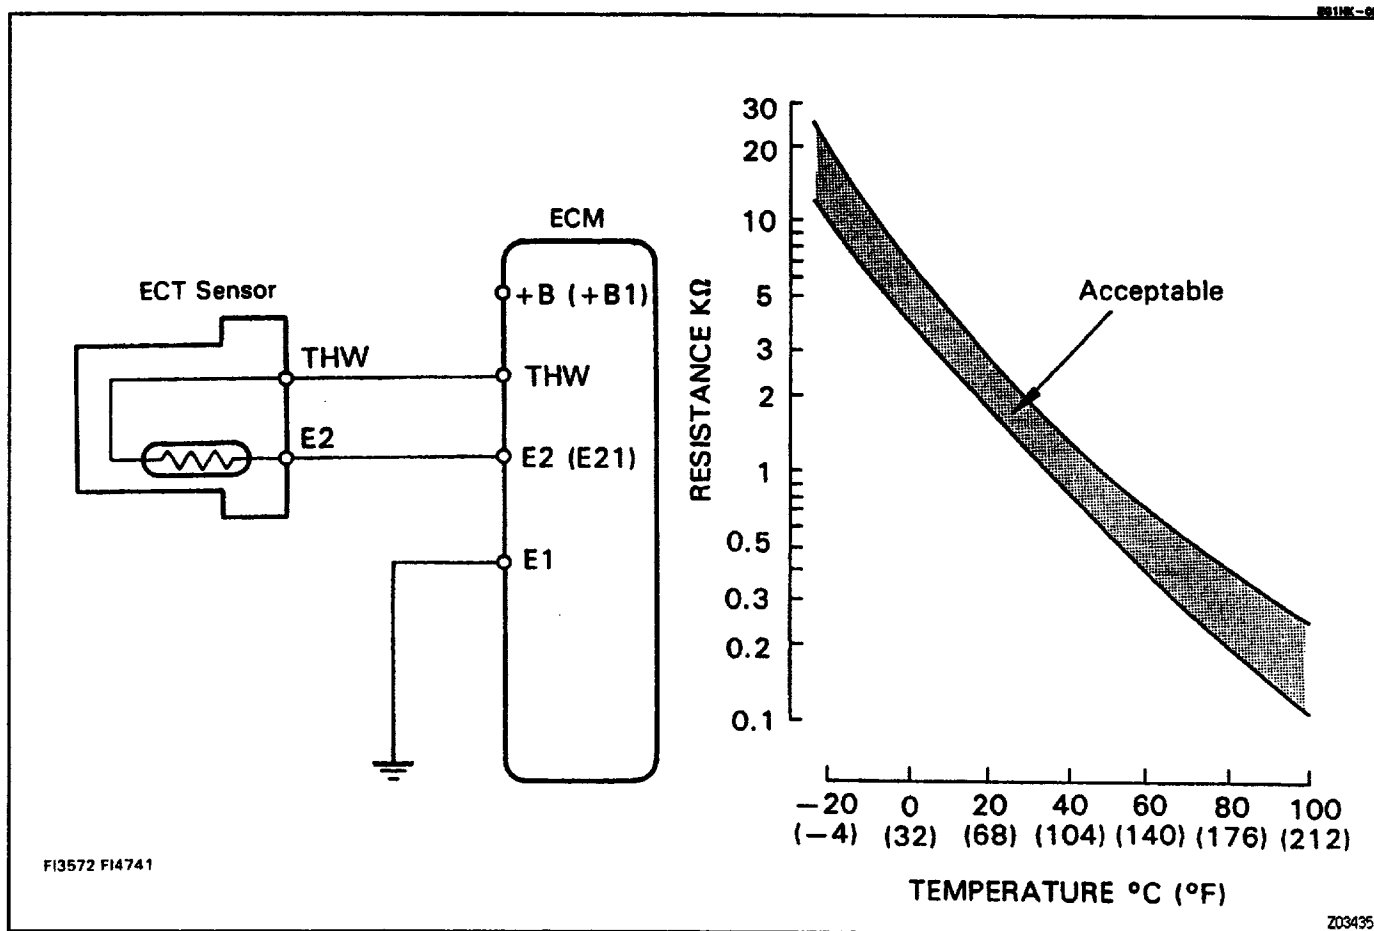

## ENGINE COOLANT TEMPERATURE SENSOR INSPECTION

### MEASURE RESISTANCE OF ENGINE COOLANT TEMPERATURE SENSOR

- Disconnect the connector.
- Using an ohmmeter, measure the resistance between terminals.

**Resistance:**

**Refer to the graph above**

If the resistance is not as specified, replace the sensor.

- Reconnect the connector.