
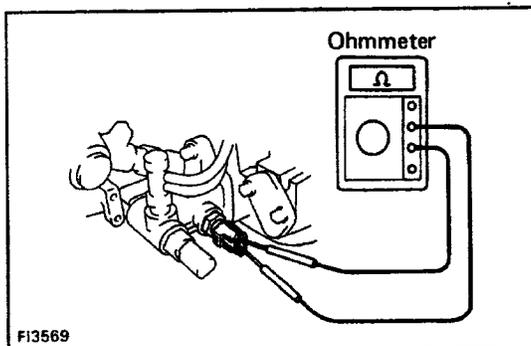


ENGINE COOLANT TEMPERATURE (ECT) SENSOR

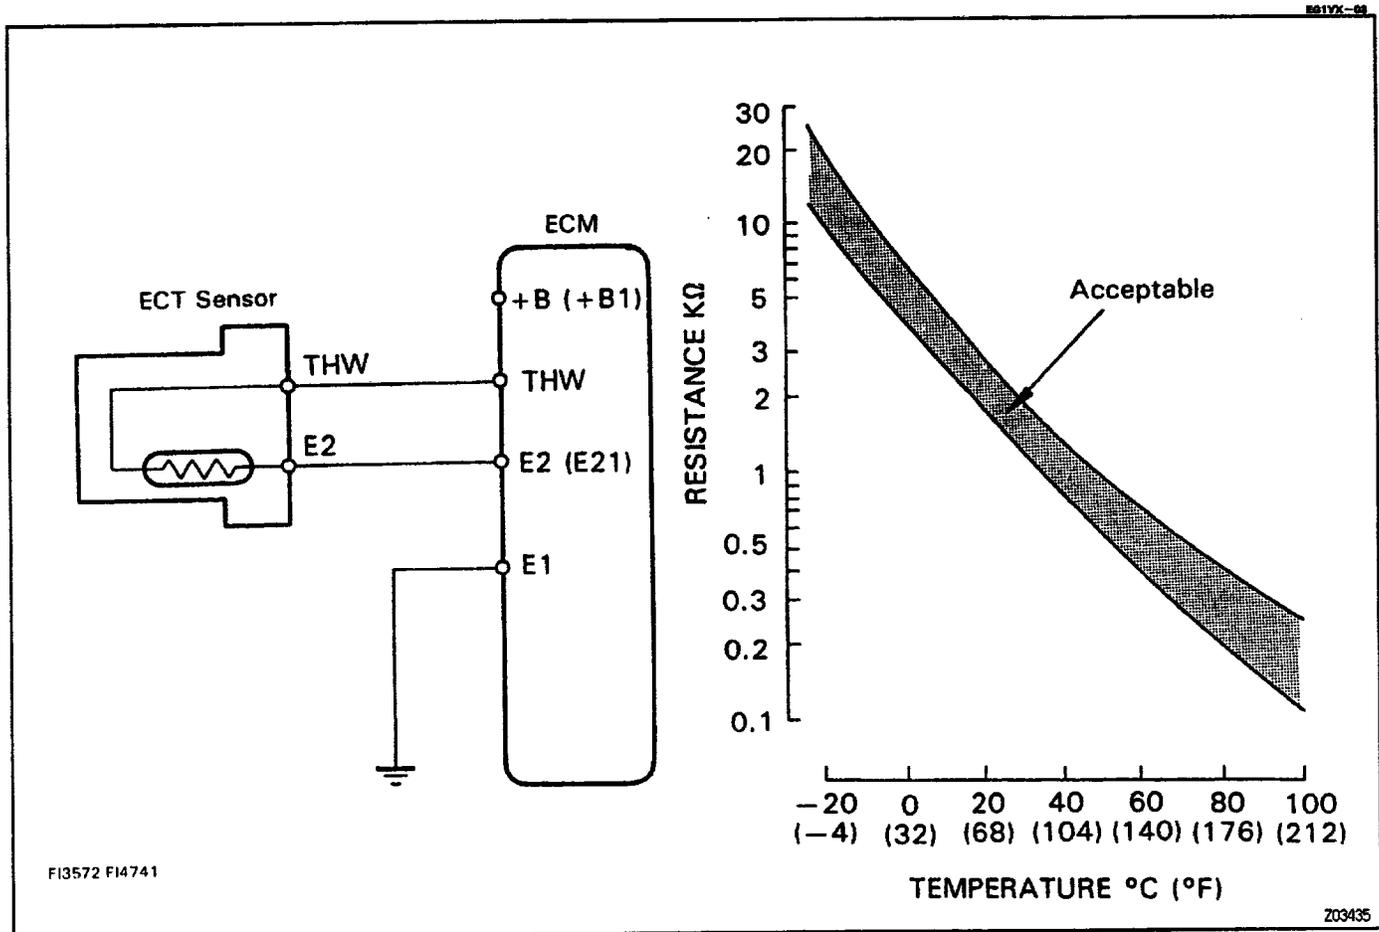

ENGINE COOLANT TEMPERATURE (ECT) SENSOR INSPECTION

- (a) Disconnect the connector.
- (b) Using an ohmmeter, measure the resistance between the terminals.

Resistance: Refer to the chart above.